


Massage Chair User Manual

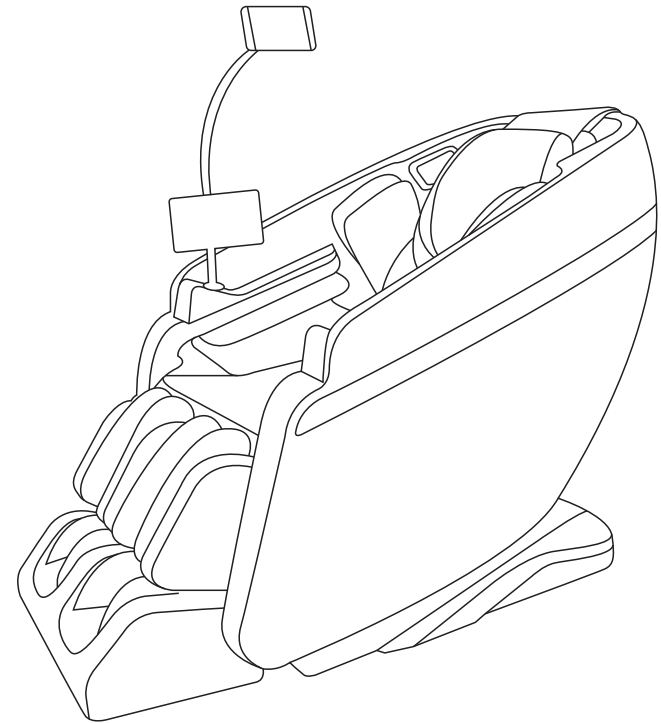

[INSTRUCTION MANUAL]

※ Before using the product, please read this manual carefully and store it properly.

Welcome!

Thank you for purchasing our massage chair. In order to better use this product, please read this manual carefully before using this product and store it properly for future use.

This massage chair is ergonomically designed to massage multiple areas such as the back, waist, hips, legs, and arms. It has various massage methods, warm thermal compress, airbag compression massage, and other functions. It is a luxury and enjoyable high-end massage chair.

Our massage chair opens up new opportunities for relaxation every day.
We wish you a pleasant experience!

The company reserves the right to improve the product and instructions without further notice. The product images are for reference only. The appearance, color, and related data of the product are subject to the actual object. All contents of this manual have been strictly reviewed, but possible typographical and printing errors and omissions are not excluded. Please understand.

/ Keyword description of eight push speech recognition functions

1	HI-MASSAGE-CHAIR	HI
2	START-MASSAGE	OK
3	END-MASSAGE	OK
4	INCREASE-MASSAGE	OK
5	REDUCE-MASSAGE	OK
6	START-MODE-ONE	OK
7	START-MODE-TWO	OK
8	START-MODE-THREE	OK
9	START-MODE-FOUR	OK
10	START-MODE-FIVE	OK
11	START-HEAT	OK
12	END-HEAT	OK
13	INCREASE-AIR	OK
14	REDUCE-AIR	OK
15	START-FOOT	OK
16	END-FOOT	OK
17	BACK-RISE	OK
18	BACK-DOWN	OK
19	BACK-STOP	OK
20	START-AIR	OK
21	END-AIR	OK
22	START-ZERO	OK
23	END-ZERO	OK

Contents

Important safety instructions	01
Safety information	02
Instructions before use	04
Shortcut key diagram and instructions	06
Mobile wireless charging slot	07
Schematic diagram and instructions for manual controller	07
Product parameters	09
Daily maintenance	09
Fault and maintenance	10

Important safety instructions

Please read all the instructions before using this product.

To reduce the risk of fire, burn, electric shock or injury to others, follow the instructions below:

- 1) The equipment is not intended to be used by individuals (including children) with physical, sensory, or mental disabilities or lacking experience and knowledge in its use, unless they are supervised or guided by someone responsible for their safety in relation to the use of the equipment.
- 2) If the power cord is damaged, it must be replaced with a dedicated cord or component obtained from the manufacturer or their service organization.
- 3) Children should be supervised to ensure that they do not play with this equipment.
- 4) Please make sure to use this product according to the purpose described in the user manual. Do not use spare parts that are not recommended by the manufacturer.
- 5) Do not use this product in the following situations: damaged power cord or plug, abnormal operation, heavy impact with the ground or other damage, or contact with water. Please send the product to an authorised repair service centre for inspection and repair.
- 6) Do not drag the power cord to move this product, or use the power cord as a handle.
- 7) The power cord must be kept at a safe distance from the heating surface.
- 8) Do not operate this product when the air outlet is blocked. Keep the air outlet clear and free from lint, hair, and other objects.
- 9) Do not insert or drop objects into any openings of the product.
- 10) Please do not use this product outdoors.
- 11) Do not operate this product in places where spray products are used or oxygen is full.
- 12) Before cutting off the power, please turn off all operating controls before unplugging the power plug from the socket.
- 13) The surface of this device heats up; people who are sensitive to heat must be careful when using it.
- 14) This device contains a grounding connection solely for functional purposes.

Faults and maintenance

Fault phenomenon	Possible causes	Processing method
Sound (Running sound) * Inflation sound of airbag * Airbag bleeding sound * Solenoid valve switching sound * Working sound of air pump	Occurs when the product is working Sound of mechanical operation	This sound is normal, No need to handle.
Overall, it does not work at all	The power plug is not plugged into the socket The socket switch is not turned on Massage button not pressed	Check the power plug and socket, and ensure that the plug is in good contact with the socket, press and massage button
Massage in progress — stops suddenly	This product has just completed 15 minutes of rated work time, and automatically switch to standby mode	If you want to massage again, please press the ON key. Enable massage function
	Over rated service time, motor overheating protection	Shut down, cut off the power supply and wait for the motor to cool down before later use.

Product parameters

Product name	Massage chair
Rated voltage	110V-240V~
Rated frequency	50Hz
Rated power	120W
Rated working time	15min
Security category	Class I
Executive standards	GB/T 4706.1-2024 GB/T 4706.10-2024

Daily maintenance

- ① For daily cleaning, please use neutral detergent and soft cloth to wipe, and do not use corrosive detergent.
- ② If the power cord is damaged, it must be replaced by qualified personnel at the manufacturer's designated service centre to avoid danger.
- ③ Please unplug the power supply when not using this product or when cleaning to avoid danger.
- ④ Do not use any sharp objects to cut the product surface.
- ⑤ Do not store the product in a damp or poorly ventilated environment; keep it in a dry, well-ventilated place.
- ⑥ Do not apply strong pressure or force on the product.

Safety information

1. Safety information

- * Please do not use the massager in an excessively humid or dusty environment to avoid electric shock or mechanical failure.
- * Do not use the massager where the room temperature exceeds 40 °C.
- * Do not place the massager near the electric heater, stove or direct sunlight.
- * The massager is designed for personal use and is not suitable for any commercial use.



Look out

- * Massager is only for indoor use.
- * When using the massager in a cold room, do not suddenly increase the temperature. It is recommended to gradually bring the temperature to a normal range before use.
- * If the massager is moved from a low-temperature storage place to a warm environment for use, the normal operation of the machine may be affected due to the moisture accumulation in the machine parts, or even the machine parts may fail.

2. Matters for safe use

- * To ensure the safety and correct use of the massager, please refer to the operation manual carefully before use.
- * If the cloth cover of the massager is damaged, do not use it.
- * To avoid reducing the massage effect or causing injury, please do not use the massager together with other heat-generating devices such as an electric blanket.
- * Do not use the massager within 1 hour after eating to avoid adverse effects.
- * Do not use the massager when your hands or other parts of your body are wet.

Safety information

- * Do not insert any articles or inflammable articles into the massager. This may cause electric shock, malfunction or fire.
- * If you feel any discomfort during the massage, please stop the operation immediately.
- * When using, do not cover the massager, so as to avoid failure or fire caused by excessive temperature.
- * This product is not used for self diagnosis or treatment: if diagnosis or treatment is needed, it should be handled by professional medical personnel.
- * For those who are receiving drugs or medical conditions, please consult a doctor before use. Do not use this product if you feel unwell or are pregnant.
- * If you are pregnant or in your physiological period, please consult your doctor first and follow his advice.
- * It is recommended to use it twice a day for 15–30 minutes each time. If not used, please turn off the power of the massage chair.
- * The surface of the appliance becomes hot; people who are sensitive to heat must take care when using it.

look out

- * Please avoid using the massager after drinking or when you are unwell.
- * Do not directly massage the head, elbow joint, knee, chest, abdomen, etc.
- * If liquid is spilled or poured on the massager, immediately remove the power plug from the socket. Do not plug or unplug the power cord when your hands are wet.
- * Do not damage the power cord or operate the massager when the power cord is damaged, which may cause accidental electric shock or mechanical failure.

Conditions under which the massager should not be used In any of the following situations, please turn off the switch immediately, cut off the power supply, and contact our company

- * If you accidentally spill water on the massager, it may cause electric shock.
- * The cloth cover of the massager is damaged, and the internal parts are exposed.
- * If abnormal or severe pain occurs during massage, please stop the massage immediately and seek medical advice.
- * If you find any malfunction or abnormal condition of the machine during use, please stop using it immediately.
- * In case of current interruption during use, care shall be taken to avoid user injury due to sudden power recovery.
- * When lightning occurs.

Automatic massage modes selection key: There are a total of 5 kinds of automatic modes available


-  ① **Leisure mode:** A gentle and soothing program suitable for family members. This program uses moderate intensity massage techniques, combined with medium strength full body airbags, to bring you the ultimate experience of full body relaxation.
-  ② **Recovery mode:** For people with shoulder and neck problems, this mode strengthens and increases the frequency of shoulder and neck massage to relieve fatigue and reduce soreness.
-  ③ **Waist mode:** For people with lower back problems, this mode combines waist and hip movements with a gentle massage function and waist airbags to relieve the muscles around the pelvis and reshape the body.
-  ④ **Relief mode:** For those who enjoy sports, this mode follows professional massage techniques to help your body restore vitality.
-  ⑤ **Sleep mode:** A soothing massage program with gentle and moderate force to relieve stress and gently aid in sleep.
-  **Seat roller:** In the working state, press this button to turn on/off the seat roller kneading massage.
-  **Backrest up:** Long press "Backrest up" to raise the backrest (the kneading and massage functions will automatically pause during the backrest is raised).
-  **Backrest lower:** Long press "Backrest lower" to lower the backrest (the kneading and massage functions will automatically pause during the backrest is lowered).
-  **Shoulder airbag pressure:** In manual operation, press this button to turn on/off the shoulder airbag massage.
-  **Arm airbag pressure:** In manual operation, press this button to turn on/off the arm airbag massage.
-  **Leg airbag pressure:** In manual operation, press this button to turn on/off the leg airbag massage.
-  **Pause:** In the working state, press this button to pause the massage of the whole machine.
-  **Manual mode:** Each press of the "Manual mode" button allows for the selection of kneading, pounding, tapping, finger pressure, kneading-hammer, and kneading massage.
-  **Airbag intensity:** Press this button to adjust the airbag massage pressure.
-  **Foot roller massage:** Press this button to activate foot kneading massage.
-  **Heating:** Press this button to turn the heating function on or off during operation.
-  **Movement position adjustment:** When this function is in operation, first press the "Manual Mode" button, then press the "Movement Up" or "Movement Down" buttons to adjust the position of the back massage movement.
-  **Zero gravity:** In manual operation, press this button to change the angle of the chair body and enter the zero gravity posture.
-  **Back massage intensity:** Press this button while working to adjust the speed of back massage. (Three levels adjustable)
-  **Automatic air pressure:** Press this button to turn on or off automatic air pressure massage.
-  **Time:** The default setting time is 15minutes, press this button to set massage time, and the massage time can be adjusted from 15 minutes to 30 minutes.

/Mobile wireless charging slot



The massage chair features a wireless charging pad on the right armrest for a more convenient user experience

/Schematic diagram of manual controller

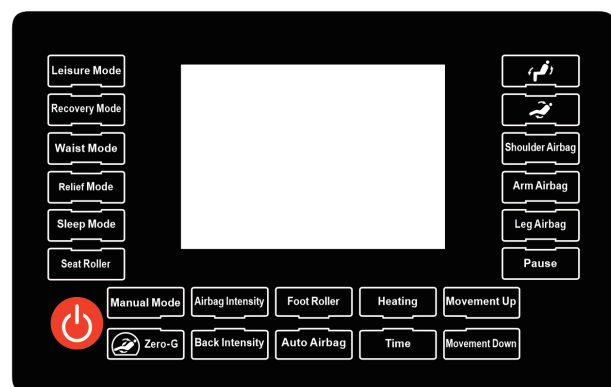

/ Manual controller instructions

Power key

When powered on, pressing this button initiates the body shape detection. Please lie fully relaxed on the massage chair to ensure accurate detection. When the neck and shoulder position countdown reaches 5 seconds, if the position does not suit your personal needs, you can manually adjust the roller position by long-pressing "Move Up" or long-pressing "Tilt Down". Once complete, the chair runs in automatic mode by default, with a default session time of 15 minutes. To turn off the massage chair, press this button; all functions will shut down after a 20-second reset sequence.

Instructions before use


① Unpacking and installation

This model comes in a single package.

After unpacking, carefully remove the massage chair. This model arrives fully assembled and requires no installation. (Simply plug in the power cord to use.)


② Preparation before use

After unpacking, locate the master switch on the back of the massage chair, connect the power cord, turn on the switch, and the chair is ready to use.

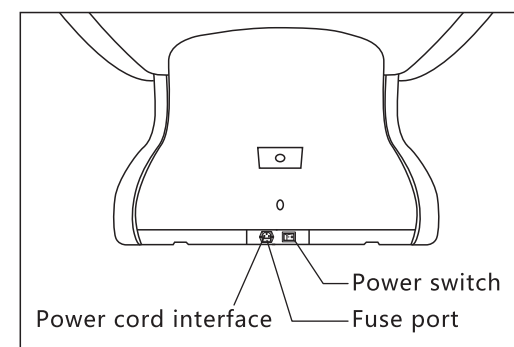


③ Placement of massage chairs

1. Do not place the power cord under the base of the massage chair. (As shown in Figures 01 and 02)

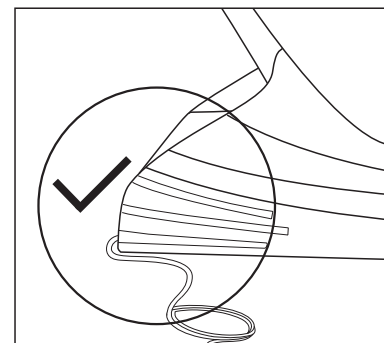

Correct (Figure 01)

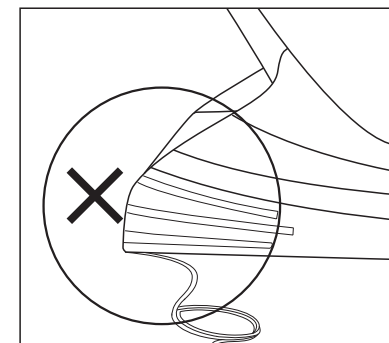

Error (Figure 02)


2. Make sure to leave proper space around the massage chair when preparing for massage (as shown in Figure 03)

The place where the massage chair is placed should have enough space for the chair back to recline and the foot rest to rise.

Make sure there is at least 35cm space behind the massage chair and at least 35cm space in front of it.

Ensure that there are no obstacles and people in front of and behind the massage chair.


To prevent the ground from being damaged, please place a carpet under the massage chair to avoid damaging the ground.

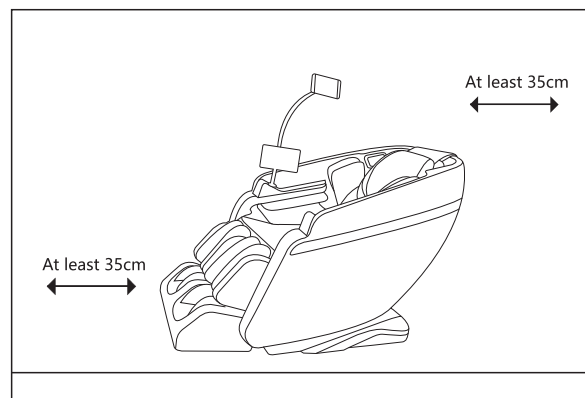

(Figure 03)


④ Movement of massage chair

Press the backrest with both hands to tilt the chair back about 45 °, and carefully push the massage chair forward or backward with the casters until it is put down at an appropriate position. (As shown in Figure 04)

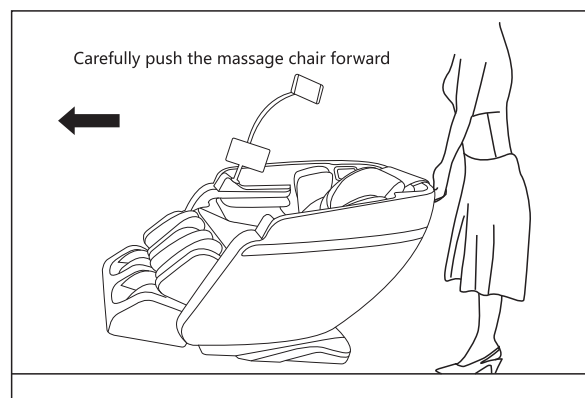

(Figure 04)

/ Shortcut Key Diagram

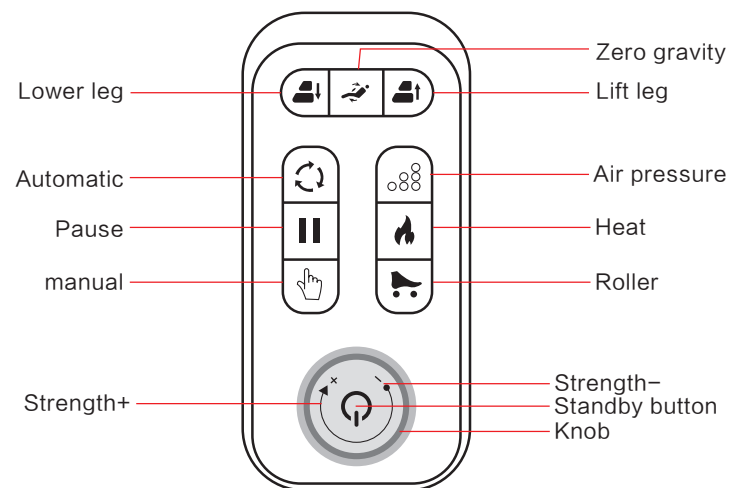

/ Instructions for using shortcut keys

Standby button: Press knob (⏻) to turn on/off the massage function of the entire machine.

Knob: Rotate the knob to adjust the massage intensity.

Press the heating button: (🔥) to turn on/off the heating function.

Zero gravity key: Press (🛋️) to turn on or off the zero gravity function.

Lower leg button: (🦵) Press and hold the lower leg button to lower the height of the lower leg, and release this button to fix the height of the lower leg.

Lift legs button: (🦵) Press and hold the lift legs button to increase the height of the lower leg, and release this button to fix the height of the lower leg.

Pause button: (⏸) Press this button to pause all functions of the massage chair.

Press the manual key: (👤) Each time you press the manual key, you can choose different massage methods.

Press the auto key: (🔄) to select different massage modes each time.

Press the roller key: (🚲) to turn on/off foot massage.

Press the air pressure key: (🌬️) to turn on/off the air pressure function.

/ Bluetooth connection

Bluetooth function is turned on when the machine turned on. Turn on your mobile Bluetooth function, search the machine Bluetooth and connection to playing the music.

Bluetooth Name: VIREST **Pin Code:**8888